

# SPARKER TCIP4 version 96

SPARKER TCIP4 is an ignition unit for road motorcycles. The ignition principle is inductive. The unit is four-channel (has four ignition outputs). In past we produced also two-channel version, but we produce only four-channel version from 1.1.2021. The unit is programmable through PC. The unit is fully adjustable regarding the ignition timing. It contains two switcheable ignition advance curves / maps dependent on RPM and position of throttle or underpressure in the intake manifold. The ignition also contains output for tachometer, two multifunctional outputs, two multifunctional inputs, outputs and an input for the servomotor exhaust throttle. The unit is also equipped with some racing features - mainly Quickshift and Gear shift light. During programming, the ignition unit is connected to a computer via a serial port. TCIP4.EXE configuration software ("software") is included.

Unit are produced in several further modifications related to the inputs for engine position sensors. The inputs for position sensors are two and each of them can be custom-made in the following versions:

- 1) For inductive sensor (marked **IND** or unmarked)
- 2) For inductive sensor with a pulsed rotor with more than 12 protrusions ( marked **24-2**)
- 3) For inductive sensor with a pulsed rotor with more than 36 protrusions ( marked **48-2** or **60-2**)
- 4) For HALL sensor or optical sensor (marked **HALL**)
- 5) For inductive sensors and pulse rotor with one pulse lobe (marked **ONE LOBE** or **DUCATI KOKUSAN**)

Unit are also produced in two further modifications related to the output for ignition coils:

- A) For standard ignition coils (unmarked). This output provide ground when coil is excited.
- B) For ignition coils with integrated driver (marked **SPA**). This output provide +5V when coil is excited.

## HARDWARE

### Supply voltage +12 V input

The nominal power supply voltage should be 14 V. The supply voltage must be between 8-18 V. In this range the unit is able to provide control of all the processes. Above 20 V the unit stops controlling the coils (overvoltage protection). Supply voltage is connected with the positive pole to +12V (pin 13) and with the negative pole to GND (pin 14).

Pins 14, 16 and 7 are interconnected in the unit. They can all be used either to connect the power (power supply) ground or to connect the ground for sensors. Ground for sensors should be connected from unit and it should not be interconnected with power ground or with engine or chassis mass.

### Input for the engine load sensor

The input for engine load sensor can be realized by the throttle position sensor (TPS) or by intake air pressure sensor (IAPS).

An input is ready for standard TPS or IAPS sensors used on motorbikes. It is designed to bear voltage up to 5V. Setting up the voltage levels of the TPS for 0% and 100% or IAPS for 0-999 kPa is included in software.

TPS or IAPS are powered by reference voltage +5V (pin 17) and SENSE GND (pins 7 or 16). Ground for sensors should be connected from unit and it should not be interconnected with power ground or with engine or chassis mass. Sensor outlet will be connected to TPS/IAPS (6).

### Crankshaft position sensor CKPS

The ignition unit can be used for almost all known and still unknown motor position pickup systems. Most of the systems can be chosen directly by selecting relevant motorcycle type from the list included in software. Different pickup system can be set following a special procedure in software.

An input is ready for standard pickups (inductive, reluctant type) used on motorbikes. On request, we can also deliver inputs for HALL sensors.

One outlet of the CKPS will be connected to CKPS 1 (pin 9) and the other outlet will be connected to SENSE GND (pins 7 or 16). In double-pickup systems the other sensor's one outlet will be connected to CKPS2 (pin 20) and the other outlet will be connected to SENSE GND (pins 7 or 16). Ground for sensors should be connected from unit and it should not be interconnected with power ground or with engine or chassis mass.

In the case of HALL type sensor the sensor can be powered by +5V (pin 17) or by +12 V.

### Multifunctional inputs

The unit contains two multifunctional inputs. Inputs should be activated using switch with respect to ground. The inputs can be assigned different functions:

- |              |  |
|--------------|--|
| KILL SWITCH  | - the unit will stop ignition when input is grounded                                   |
| BLOCKING     | - the unit will stop ignition when input is ungrounded (security circuit of sidestand) |
| QUICKSHIFT   | - activate Quickshift sequence (gear shift up with full gas)                           |
| RETARD       | - decrease ignition advance with preselected value in full range                       |
| START LIMTER | - activate Starting limiter (launch control)   |

2nd ADVANCE CHART - switch to 2th ignition advance curve/map

One outlet of the switch will be connected to M IN 1 (pin 8) and the other outlet will be connected to ground.

One outlet of the switch will be connected to M IN 2 (pin 19) and the other outlet will be connected to ground.

### Outputs for induction coils IC 1, 2, 3, 4

One outlet of the induction coil IC 1 will be connected to IC 1 (pin 1) and the other one to the switched +12V.

One outlet of the induction coil IC 2 will be connected to IC 2 (pin 10) and the other one to the switched +12 V.

One outlet of the induction coil IC 3 will be connected to IC 3 (pin 2) and the other one to the switched +12 V.

One outlet of the induction coil IC 4 will be connected to IC 4 (pin 11) and the other one to the switched +12 V.

Dwell mode of the ignition coils can be set to short/long/manual/auto using software. When setting up the dwell it is necessary to check whether the used induction coil is suitable for the chosen configuration. Short dwell is generally used for ignition coils with primary coil resistance less than 2 Ohm. Long dwell time with these ignition coils can result in their destruction. On the contrary, if short dwell time is used for coils that need long dwell time, the energy of spark could be reduced especially in high RPM. You can also set the dwell time manually or automatically for specific induction coil. For more details see the Software section.

### Tachometer output TACHO

The tachometer output is compatible with most on-board devices used on motorbikes. Number of pulses per one revolution and possible corrections are set using software.

TACHO is supplied by 12 V voltage and GND. TACHO output will be connected to TACHO (pin 15).

The revolution indicator output is not compatible with on-board devices used on old Honda motorcycles from the 1990s (ignition units with OKI 16pin connector). Unit can be equipped with revolution indicator output compatible with these on-board devices (marked **HONDA TACHO**).

### Multifunctional outputs

The unit contains two multifunctional outputs (Power Outs). Outputs are type NPN opek collector (it provide ground when is switched on). Outputs can switch resistive or inductive load up to 2 A. Outputs can work with various modes preselected with software:

Fuel pump - it is switched on for 4 seconds after unit switch on and always when engine is running.

Gear shift light - two stage gear shift light.

PowerJet Honda - behavior like PowerJet at Honda RS125.

Special - switch on and and switch off according curve/map with pulse-width modulation possibility (powerjet).

Special PWM - continuous control with pulse-width modulation according curve/map (powerjet for example).

Special pulse - continuous control using the pulse length according curve/map (oilmaster for example).

Multifunctional output 1: Load should connected with one outlet to POWER OUT 1 (pin 3) and second outlet to +12 V.

Multifunctional output 2: Load should connected with one outlet to POWER OUT 2 (pin 12) and second outlet to +12 V.

### Outputs and input for SERVO

Servo outputs and input are compatible with most of servomotors used on motorbikes for exhaust throttle (e.g. Yamaha EXUP). The unit is equipped with servo control only in the full (4-channel, 4CH) version. Required dependency of servo position on RPM and engine load can be configured in program.

Servomotor outputs are M (pins 4 and 5). Power supply for servo position sensor is connected to +5V (pin 17) and SENSE GND (pins 7 or 16). The output of position sensor is connected to STPS (pin 18).

### Connector adapter, basic harness

For many motorcycles we manufacture so-called **connector adapter**. This is a short bundle, on one side equipped with a connector fitting into unit and on the other side equipped with a connector fitting the original ignition unit. This connector adapter provides **plug and play** connection possibility with the original cable harness.

Next connection possibility is **Basic harness**. This is counterpart connector with all wires with pins crimped. Length is 1.3 m.


We offer also **Reduced basic harness**. This contains only wires necessary for basic work of ignition.

In the connector adapters we use the colours of the wires listed in the following table.

**Wire colors TCIP4.**

Wire colour	Connector pin number	Name	Description
Orange	1	IC 1	Induction coil 1
Yellow/black	2	IC 3	Induction coil 3
Purple	3	Power out 1	Multifunction output 1
Green	4	M	Servomotor output
Green	5	M	Servomotor output
Grey	6	TPS, IAPS	Engine load sensor
Blue or light blue	7	GND, SENSE GND	GND, SENSE GND
Black	8	INPUT 1	Multifunction input 1
Yellow	9	CKPS 1	Crankshaft position sensor 1
White	10	IC 2	Induction coil 2
Red/black	11	IC 4	Induction coil 4
Blue/white	12	Power out 2	Multifunction output 2
Red	13	+12 V	Power supply 12 V
Blue	14	GND	Ground
Green/yellow	15	TACHO	Revolution indicator output
Blue or light blue	16	SENSE GND	Sensor ground
White/red	17	+5 V	Power supply of sensors
White/blue	18	STPS	Servo position sensor
Grey/red	19	INPUT 2	Multifunction input 2
Brown	20	CKPS 2	Crankshaft position sensor 2

Recommended connection diagram

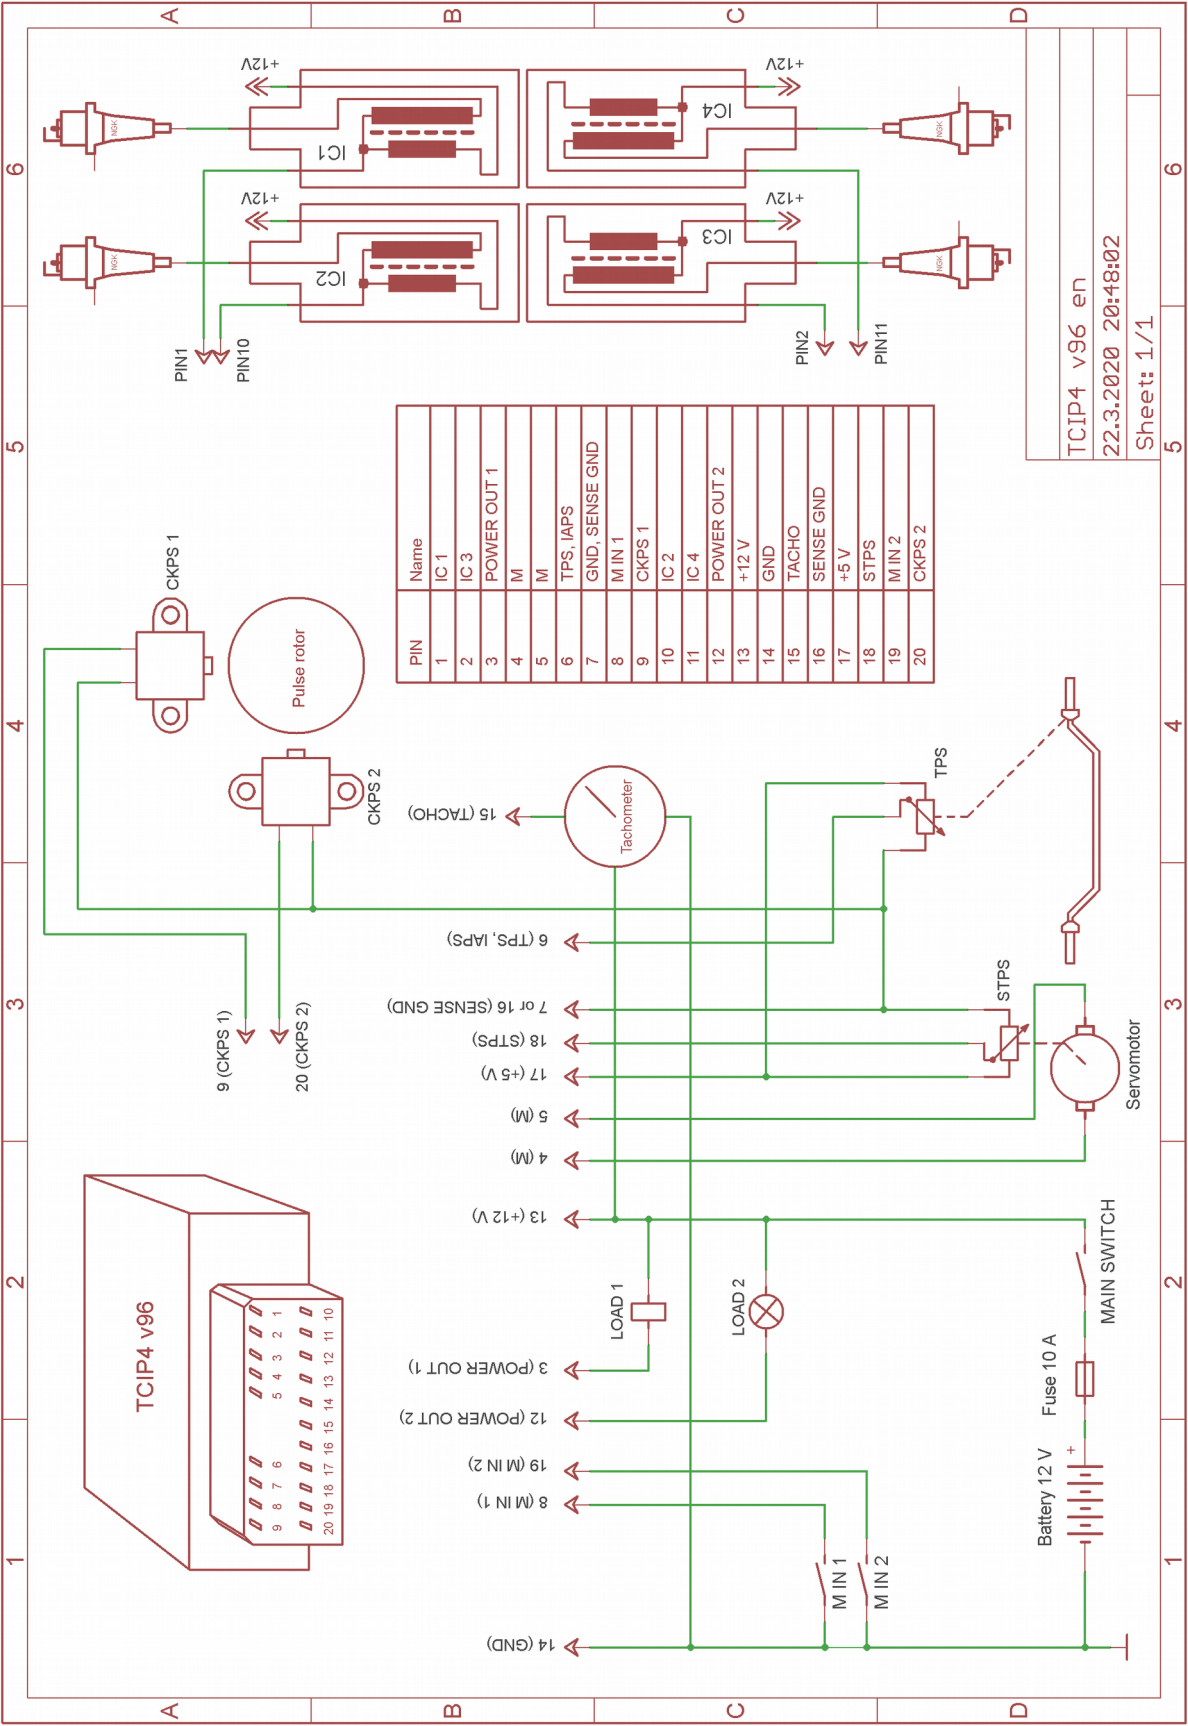

## TCIP4 software

### Pull down menus

**File** - includes items:

<b>New</b>	- default data setting.
<b>New for current tab</b>	- default data settings only for the current tab.
<b>Open</b>	- opens data file.
<b>Open from exe dir</b>	- opens data file from the same directory as the control software.
<b>Open for current tab</b>	- opens data file for the current tab only.
<b>Save</b>	- saves data file.
<b>Save to exe dir</b>	- saves data file to the same directory as the control software.
<b>Nine last opened data files</b>	
<b>Print</b>	- prints current settings of the current tab.
<b>Exit</b>	- exits the program.

Clicking **New** results in automatic default settings of all parameters. These correspond to four-stroke engine without TPS.

**Port** - includes items to select the communication line.

<b>COM offline</b>	- communication off.
<b>COM XX</b>	- list of useable serial ports.
<b>COM auto</b>	- automatic connection

For PCs without serial port (USB only) it is necessary to use USB/RS232 adapter.

<b>Ignition</b> - includes items	<b>Read</b>	- reads data from the unit.
	<b>Verify</b>	-  compares data in PC with data in the unit.
	<b>Program</b>	- sends data to the unit and performs verification.
	<b>Reset</b>	- resets the unit.

**Tools** – includes tools to set the advance, UNDO and REDO.

**Language** - language settings: **English, Czech, German**

<b>Help</b> - includes items	<b>Help</b>	- opens Assembly guide (this file).
	<b>About the program</b>	- information on the software (version, date).

### Icons menus



- sets default values. Warning!!! Clicking this icon results in automatic default settings of all parameters.



- opens data file.




- saves data file.



- prints the current settings.



- tools for going back or forward step by step when changing the settings.



- see pull down menu Ignition.

### Tab sheet Miscellaneous

<b>Limiter</b>	- engine speed limiter value settings (limits with all ignitions off).
<b>Start limiter</b>	- Start limiter value settings (limits with all ignitions off)

**Start limiter delay** - Start limiter activation delay value settings. This is useful when Start limiter switch is located at clutch lever. Start limiter is activated with delay, so that are not problems if clutch is used for next driving.

**Quickshift time** - sets ignition switch off period during gear shift.

**Quickshift pause** - sets time of clutch master insensitivity after gear shift.

**Retard** - sets the value for ignition advance retard if the function is active.

**Dwell** - sets dwell mode of induction coils.

**Short** - for coils with resistance lower than 2 Ohm. Dwell time 1 ms with the dynamic addition 12%.

**Long** - for coils with resistance higher than 2 Ohm. Dwell time 3 ms with the dynamic addition 12%.

**Manual** - possibility to manually configure the excitation time.

**Auto** - automatic dwell time determination. The unit itself determines optimal dwell time by measure dynamic current in channel 1. With this choice the ignition coil has to be connected to channel 1.

**Dwell time** - dwell time required with manual settings [μs].

**Dwell correction** - automatically determined dwell time can be corrected by percentage [%].

**Dynamic dwell addition** - dwell addition to compensate uneven engine running at low RPM [%].

**Max. dwell time** - dwell time limitation, including dynamic addition [μs].

**Min. spark time** - minimum unchangeable spark duration [μs].

**Max rpm for dwell by lobe** - determination of the revolutions into which the ignition uses the starting sequence of dwelling the coils(excitation by a fixed angle given by a virtual lobe. This virtual lobe is defined in the settings of the pickup system (see tab Bike).

**Inputs for neutral and side stand** - logic of neutral and side stand inputs is set so that BLOCK function is activated when both inputs are used (if at least one multifunction input is grounded, the bike is not blocked).

**Multifunctional Input 1, 2**

**Off** - no function.

**Kill switch** - when input is grounded - the unit will stop ignitions.

**Blocking** - when input is not grounded - the unit will stop ignitions.

**Quickshift** - function to interrupt or retard the ignition when gear up shifting. Settings is at tab sheet Race.

**Retard** - function to decreases the ignition advance by preset value.

**Start limiter** - function to activate Start limiter.

**2nd advance chart** - function to change ignition advance from curve/map 1 to curve/map 2.

**Inverse polarity** - standard polarity is that input is activated by grounding. With inverse polarity will input activated by ungrounding.

**Input =** - visualisation of input activation.

## Tab sheet Bike

**Motorcycle type** - crankshaft position sensing system selection for specific motorbike.

**Tachometer output**

**Number of pulses per revolution** - basic tachometer output settings.

**Corrections** - percentage corrections of tachometer values [%].

**Compensation** - frequency compensation of the phase error of engine position inputs. The phase error is due to the frequency dependency of trigger level of input and the delay that occurs when processing the input signal. The phase error is mainly dependent on the number of lobes of the pickup system of the motor position.

**RPM without ignition** - sets the number of starting revolutions without ignition. For a **kick start system** this value represents the number of revolutions when all channels ignite together.

**Sensor polarity** - Sensor polarity selection (Plus/Minus/Auto).

**Plus** - designed for pickup connection, where - as the pulse lobe is getting near to the sensor, it generates positive voltage, and when the lobe is moving away it generates a negative voltage.

**Minus** - designed for pickup connection, where - as the pulse lobe is getting near to the sensor, it generates negative voltage, and when the lobe is moving away it generates a positive voltage.

**Auto** - unit itself determines correct polarity automatically (the algorithm is based on the assumption that the sum of pulse lobe angles is lower than the sum of gaps in between).

**Pickup interchange** - interchanges the engine position sensor inputs (pins 9 and 20).

**No polarity check** - the unit controls polarity of the sensor using shape of the signal. If the actual polarity of the sensor is different from the selected one, the unit will block ignition. This option cancels the blocking of ignition.

**Interlock input** - this option works only for pickup system **1 lobe, 2 pickups**. With elevated levels of electromagnetic interference (e.g. at the time of ignition) on some motorcycles (e.g. Ducati) unwanted activation of the pickup input may occur, especially that input which at the moment is not active. This option prevents unwanted activation blocking input 2 during activation of input 1, and vice versa: blocking input 1 during the activation of Input 2. This option, however, may cause problems, when combined with automatic determination of sensor polarity.

**Spark possible before lobe** - during standard operation of the unit ignition can take place only in the section after the start of the virtual lobe. This option allows to burn even before the virtual lobe. Unfortunately this is at the cost of the virtual lobe being 360 °, which significantly affects the accuracy of ignition especially at low revolutions.

**Lower advance at start (next edge)** - this option decreases (moves) advance to the next start pulse edge compared to the standard starting position in advance. Valid only for starting speed (speed less than 500 RPM). This option can be used especially for large volume single-cylinder engines to prevent kick-back when starting el. starter. You can use this option only for some pickup systems.

**Lower advance at start (%)** - this option delayed starting advance upon angle. This angle is determined as % part of virtual lobe. Valid only for starting speed (speed less than 500 RPM). This option can be used especially for large volume single-cylinder engines to prevent kick-back when starting el. starter. You can use this option for most pickup systems.

**Special dwell by start** - this option can be used to reduce the current load on the ignition coils when starting for pickup systems where the virtual lobe is too wide. As a standard the unit in starting revolutions excites the ignition coil from the start of the virtual lobe to the ignition at the end of the virtual lobe. With this option the dwell starts at the end of the virtual lobe, gives 2 ms and then ignition takes place. Valid only for starting speed (speed less than 500 RPM). This option partially reduced advance for the starting speed (due to delay of 2 ms).

**Description of synchronization** - here the current pickup system can be modified, or new one created (only when selecting **Special settings** in the **Motorbike type menu**). Each item allows you to define the so-called **Virtual pulse lobes**. The virtual pulse lobe can be either a single pulse lobe or a sequence of several pulse lobes and spaces between them. BEWARE: only for very experienced users. Please consult with us any atypical configurations of pickup systems. Some settings in this menu are only active if a special type motorcycle is selected.

**Ignition only during compression stroke (4-stroke mode)** - here you can set the method for full synchronization (method for determining the compression and exhaust stroke) for 4-stroke engines. With full synchronization, the unit will ignite only in the compression stroke (1x per two revolutions).

**Compression deceleration** - full synchronization will be determined by decelerating and accelerating the engine before and after the top dead center. This method is applied separately for each channel (cylinder). Achieving full synchronization is indicated by the green color of the respective channel. A red color indicates that full synchronization has not yet been achieved. This method cannot be used for so-called symmetrical motors (eg in-line 4-cylinder).

**IAP** - full synchronization will be determined by sensing and evaluating the suction pressure of one of the cylinders. The pressure sensor can be connected to pin 6 (TPS / IAPS) or pin 18 (STPS). The pin selection is on the Sensors tab. The pressure sensor only needs to be connected pneumatically to the suction tract of one cylinder (eg cylinder no. 1). By comparing the pressure of about 90 ° after the top dead center in two revolutions, the system evaluates which revolution of this cylinder is compression and which is exhaust. For individual channels, it is then possible to select in which revolution the ignition will be realized. Achieving full synchronization is indicated by the green color of the respective channel. A red color indicates that full synchronization has not yet been achieved.

On the bottom left of this tab there are some statistical data collected from the unit. These data are read out even in the case when the version of the unit control firmware and software are not compatible. It is sufficient when the connection is established and active. The following data are read: The name of TCIP4 unit, firmware version date, number of programming sessions.

## **Tab Sensors**

Contains settings for two inputs. For pin 6 (TPS / IAPS) and for pin 18 (STPS).

**Load sensor** - selection of the motor load sensor connected to the TPS / IAPS input.

**None** - no sensor will be used.

**TP** - throttle position sensor will be used. To the right of this option, the characteristics of the sensor can be written.

Set TPS 0

- by pushing it measures and sets voltage for 0% TPS (unit connected with PC, no gas).

Set TPS 100

-by pushing it measures and sets voltage for 100% TPS (unit connected with PC, full gas).

**After determining the limit values, it is necessary to store these values in the ignition by pushing the "program" button, otherwise they will not be executed.**

**IAP** - intake pressure sensor will be used. To the right of this option, the characteristics of the sensor can be written.

**IAP + IAP sync** - same as IAP, but the signal will be used also to determine full synchronization (see the Motorcycle tab).

**Servo sensor** - selection of the sensor connected to the Servo input.

**Servo** - the servomotor position sensor will be used.

**Synchro IAP** - engine intake pressure sensor will be used. The signal will be used to determine full synchronization (see the Motorcycle tab). To the right of this option, the characteristics of the sensor can be written.

## Tab sheet Advance map

It contains two sub tab sheets of switchable ignition advance curves/maps Advance 1 and Advance 2.

### **Advance map 1 and 2**

The advance map contains up to 15x10 adjustable points depending on revolutions and the engine loads (TPS or IAP) value. If no load map is used, the advance map becomes just a 15-point curve of advance depending on the revolutions. Number of the columns is possible to set with tool at right side of curve/map.

Setting of the advance map (curve) can be done in several ways.


- by writing individual values directly into the edit boxes of the PC keyboard.
- by using graphic tools up / down arrow (always to the right from the value of the edit field).
- using +/- buttons. This option allows you to change only the current edit box in the engine running mode (the active field is green) or when **ALL** option is activated the entire map (curve) can be moved in both running and off modes.
- by pressing F4 and F5, F4 has the same function as the button "-" and F5 has the same function as the button "+".
- using the scroll wheel of the mouse – by tapping the edit box the option to change by scrolling is activated.
- in display mode of the advance map **TAB** and **2D** it is also possible (using the mouse) to pull individual points of the curve.

**Base advance** - is the angular difference between the position when the crankshaft position sensor is directed to the end of the virtual pulse lobe pulse and the top dead centre position (see angle "base advance" in the picture below). **This value is always determined by the mechanical constitution of pickup system and shall never be changed by software settings!!!**

The field "**Base advance**" thus is not there to change the base advance: into this field the value must be entered that corresponds to the physical condition of the engine. Use stroboscope lamp for check of base advance value.

To the first point of the revolution of advance curve the unit ignites on the value of base advance (at the end of the virtual pulse lobe). The exception is the "**Start of lobe system**" that can ignite at the beginning of the of the virtual pulse lobe. **Therefore for revolutions lower than the first point of advance curve early ignition point cannot be set, as it is derived from the mechanical design of the pickup system!!! The first revolution point of the curve in most cases should be chosen above idle speed!!!**

Please contact us in case of any uncertainties regarding the design of the pickup systems and their functioning with unit.

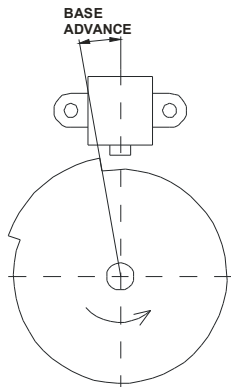

**Correction** - Correction of the advance of individual cylinders [°].

## Tab sheet Power Out

Contains settings for two multifunctional outputs **Power out 1, 2**

**Off** - the output is not active.

**Fuel pump** - to control the fuel pump relay, after the ignition is activated for 4 s, when engine running always activated.

**Gear shift light** - to control the two-state gear shift indicator. One state blinking, second state lighting.

**Power jet Honda** - to control PowerJet. The output is switched to ground according to truth table (marked cell) after the comparison limits derived from values on table axes are exceeded. Settings is predefined as original control at motorcycle Honda RS125.

**Special** - to control specific devices (pair valve, Powerjet). The output is switched to ground according to truth table (marked cell) after the comparison limits derived from values on table axes are exceeded.

**Hysteresis [RPM]** - engine speed hysteresis. Difference of RPM for switch on and switch off. (for Special and Power jet Honda).

**PWM [%]** - percent value of duty for pulse-width modulation (for Special). Frequency of modulation is 10 Hz.



**Special PWM** - to control specific devices (pair valve, Powerjet) using PWM (pulse-width modulation). Values of PWM you can set in curve/map. Frequency of PWM can be set 2-20 Hz.

**Special pulse** - to control specific devices (oil master) using repeated pulses. Period of pulses you can set in curve/map. Length of pulses can be set 5-500 ms.

**POUT1, POUT2** - Power out work visualisation.

## Tab sheet Servo

**Servo on** - Software activation of servo controller.

**Map of positional requirements** - of servo controller has up to 15x10 adjustable points depending on revolutions and engine load (TPS angle or the pressure in the intake manifold IAP). If no load map is used, the map becomes only (up to) 15-point curve. Number of the columns is possible to set with tool at right side of curve/map.

The requirement for the position of the servo controller has two modes.

**Voltage** (option "percent" is not checked) - the servo controller searches for the calculated voltage resulting from the map (or curve). After the ignition is switched on the unit checks the servo controller so that it must find the highest and lowest required voltage value, which is located on the map (or the curve) of voltage requirements. When these voltage values are not found (whether due to mechanical obstructions or due to wrong settings), the servo is shut down.

2) **Percent** (option "percent" is checked) - the servo controller searches for the calculated percentage values resulting from the map (or the curve). After the ignition is switched on the unit finds (through mechanical stops - must be available!!!) lower position, which is marked as 0% and the upper position, which is marked as 100%. The servo controller then moves between these points according to calculated current requirements.

**1/P[mV]** - this is the voltage deviation from which there is linear decrease of the performance of the servo controller towards the required value. Size must be set so that the engine does not tremble and at the same time it must have the smallest regulation deviation. In practice 100 - 600 mV. BEWARE - in case you set too low value there is a risk of servo oscillation.

**Off [mV]** - voltage deviation from which the servo is completely switched off towards the required value of servo position. In practice 5-50 mV.

**Servo =** - actual demanded/measured value of servomotor position [mv].

## Tab sheet Tests

Here you can manually perform some actions that are used to test the outputs of the unit.

**Ignition** - test of individual ignition outputs.

**Servo** - test of servo outputs (both directions). The parameter **Time** specifies the time period during which the servo test is carried out.

**Rpm** - test of tachometer output. Rpm parameter specifies the engine speed with which the output will be tested.

**Powerouts** - test of multi-function outputs 1 and 2.

**Hourmeter** - running hours counter

**monitor PickUps** - run window for pickups signals monitoring.

## Monitor

The monitor is located in lower section. Sensor values and engine's operational characteristics can be observed here. Should there be **No connection with PC** prompt displayed in the upper right corner, the unit is not connected, switched on, or its correct COM port is not selected.

When unit starts communication - software reads data from unit and compares it with current data in software. If data in unit and in software are different - software will notice you.

If you will open setting data file - you can see full path to file location at upper toolbar.

**Programming after a change** - automatic programming settings (after every change).

**Not Reading** - reading is not allowed (after programming with this option data cannot be retrieved from the unit).

**COM** - signal of currently used communication port.

**RPM** - current engine speed.

**TP/IAP** - current throttle position.

**Pickup 1 and 2** - pickup work or error of pickup system visualisation.

**U** - current supply voltage.

**ADVANCE 1 to 4** - current ignition advance of individual cylinders.

**Kill switch** - visualisation of Kill switch function activation.

**Blocking** - visualisation of Blocking function activation.

**Quickshift** - visualisation of Quickshift function activation.

<b>Retard</b>	- visualisation of Retard function activation.
<b>Limiter</b>	- visualisation of rev Limiter activation.
<b>Start limiter</b>	- visualisation of Start rev limiter activation.
<b>2nd advance chart</b>	- visualisation of switch to 2nd advance chart.
<b>Dwell</b>	- real (and optimal) dwell time of induction coil. Real dwell is presented including the dynamic addition or during startup sequence). Optimal dwell is computed in unit according to current feedback with ignition coil at ignition output 1 (pin 1). Optimal dwell is presented without dynamic addition. Optimal dwell is used when automatic dwell is applied.